


SEAT HEATER (FOR CANADA)

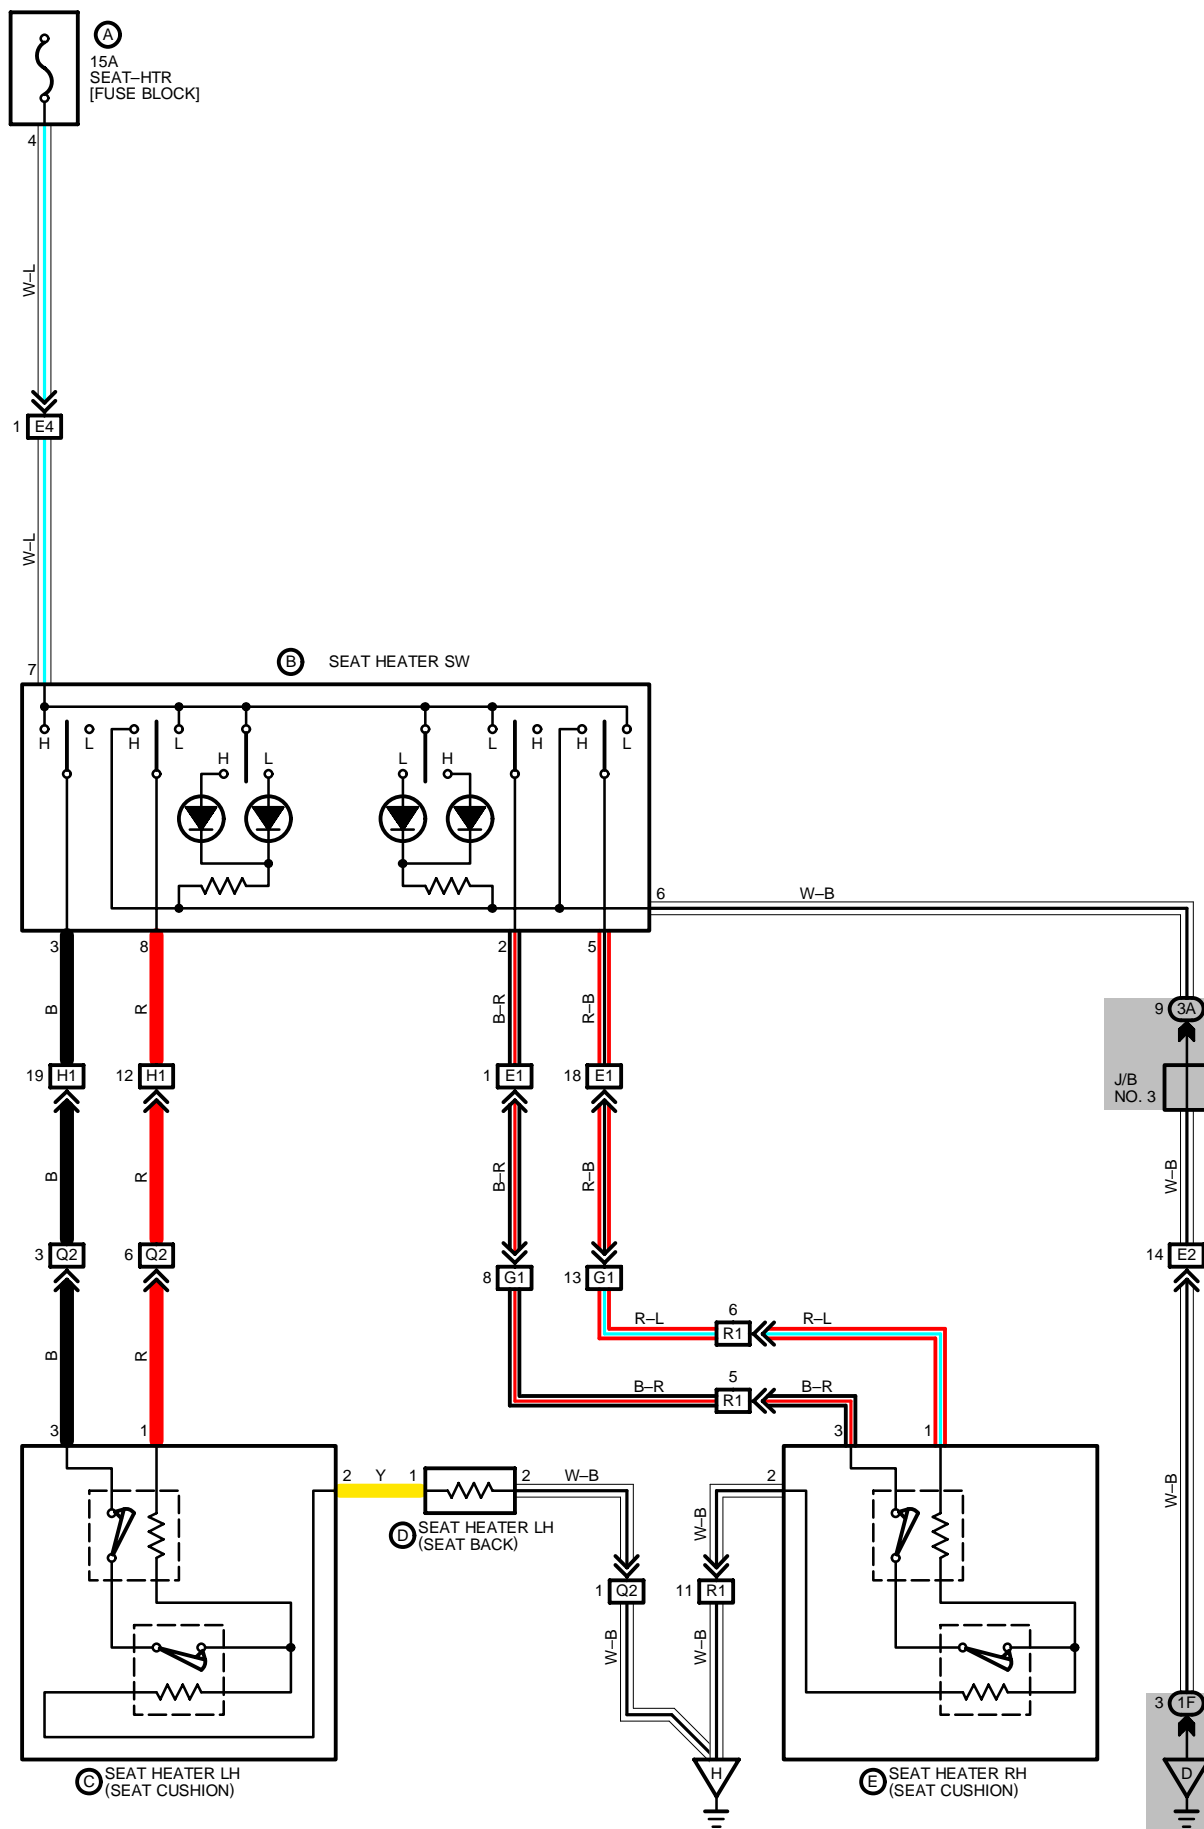

SERVICE HINTS

(B) SEAT HEATER

7-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
 6-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A	F13 26	C	S16 27	E	S17 27
B	S13 26	D	S15 27		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1F	18	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3A	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (INSTRUMENT PANEL)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
E1	30	INSTRUMENT PANEL WIRE AND COWL WIRE (LEFT KICK PANEL)
E2		
E4	30	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL LEFT)
G1	32	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
H1	32	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
Q2	32	FLOOR WIRE AND SEAT WIRE (VERTICAL AND SLIDE, UNDER LH SEAT)
R1	32	FLOOR WIRE AND FLOOR NO. 2 WIRE (FLOOR RIGHT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
D	30	J/B NO. 1 SET BOLT
H	32	FLOOR LEFT

(A) BLACK

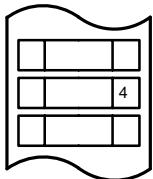

(FUSE BLOCK)

(B)



(C) BLUE



(D) BLUE



(E)

